


Frame Hinge and Strike Locations
 1 3/4" with 3 Each 5" Hinges


NOTE: When using this chart for premachining door measurements, reduce the A & C dimensions 3/32" each for door clearance.

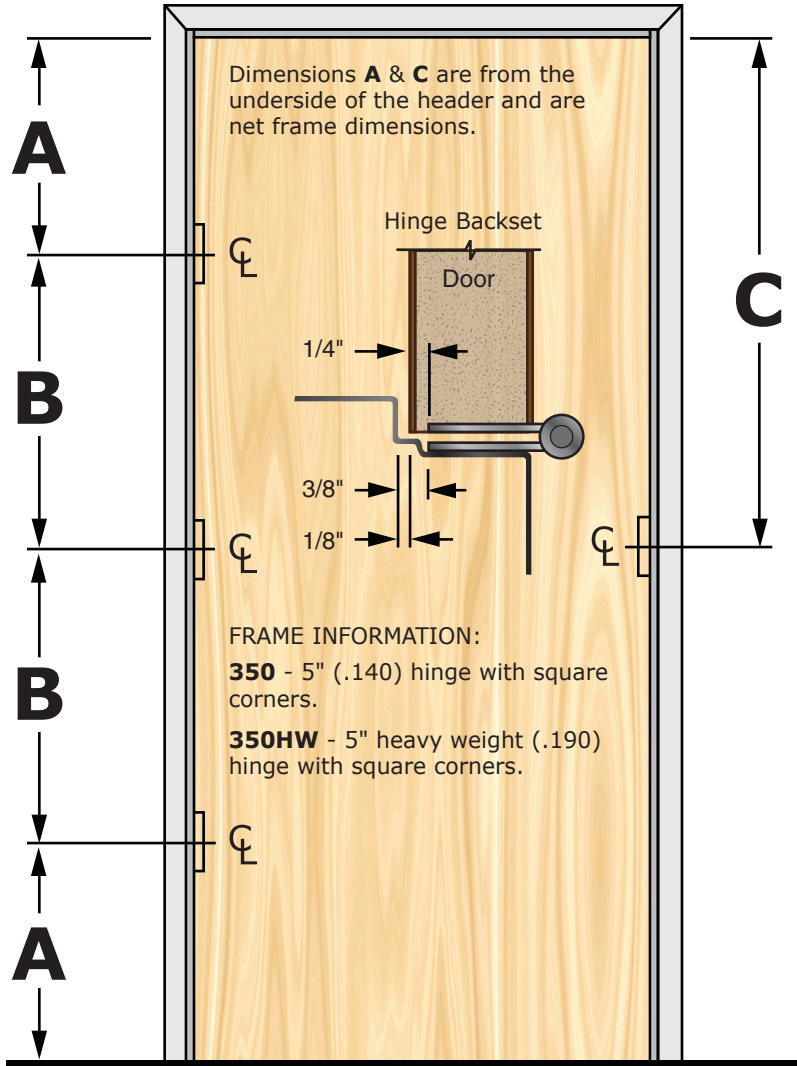


NET FRAME DIMENSIONS

HEIGHT	A	B	C
5-0	10-27/32	19-1/4	20-3/32
5-1	10-27/32	19-3/4	21-3/32
5-2	10-27/32	20-1/4	22-3/32
5-4	10-27/32	21-1/4	24-3/32
6-0	10-27/32	25-1/4	32-3/32
6-8	10-27/32	29-1/4	40-3/32*
6-9	10-27/32	29-3/4	41-3/32
6-9	10-27/32	29-3/4	40-19/32*
6-10	10-27/32	30-1/4	42-3/32
7-0	10-27/32	31-1/4	44-3/32
7-0	10-27/32	31-1/4	42-3/32*
7-4	10-27/32	33-1/4	48-3/32
7-6	10-27/32	34-1/4	50-3/32
7-8	10-27/32	35-1/4	52-3/32
7-10	10-27/32	36-1/4	54-3/32
8-0	10-27/32	37-1/4	56-3/32
8-4	10-27/32	39-1/4	60-3/32
8-6	10-27/32	40-1/4	62-3/32
8-8	10-27/32	41-1/4	64-3/32
8-10	10-27/32	42-1/4	66-3/32
9-0	10-27/32	43-1/4	68-3/32
10-0	10-27/32	49-1/4	80-3/32

+ Frame Heights are 3/16" longer than callout door height unless ordered net. (3/32" top, 3/32" bottom for clearance).

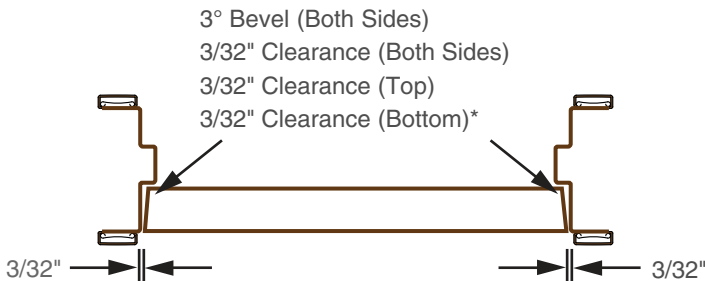

*Additional clearance is required for Thresholds and various floor conditions.

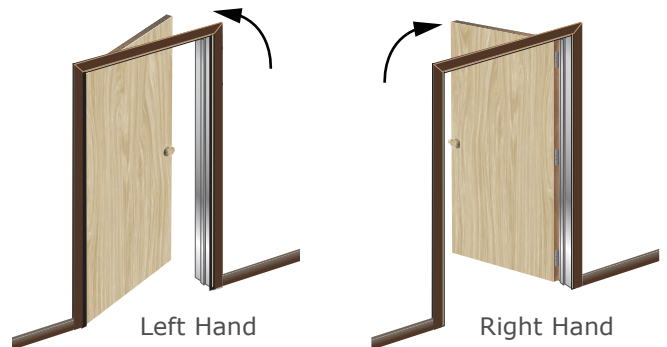

Handing Information: To establish handing always **Push** the door away from you.

*Reversible - Frame can be used as Left or Right Hand, swing in or out

FOR SPECIFICATIONS NOT SHOWN, PLEASE CONSULT OFFICE.
 PLEASE SPECIFY IF USING STANDARD COMMERCIAL OR HEAVY WEIGHT COMMERCIAL HINGES.