



Frame Hinge and Strike Locations  
 1 3/8" with 4 Each 3 1/2" Hinges

NOTE: When using this chart for premachining door measurements, reduce the A & D dimensions 3/32" each for door clearance.

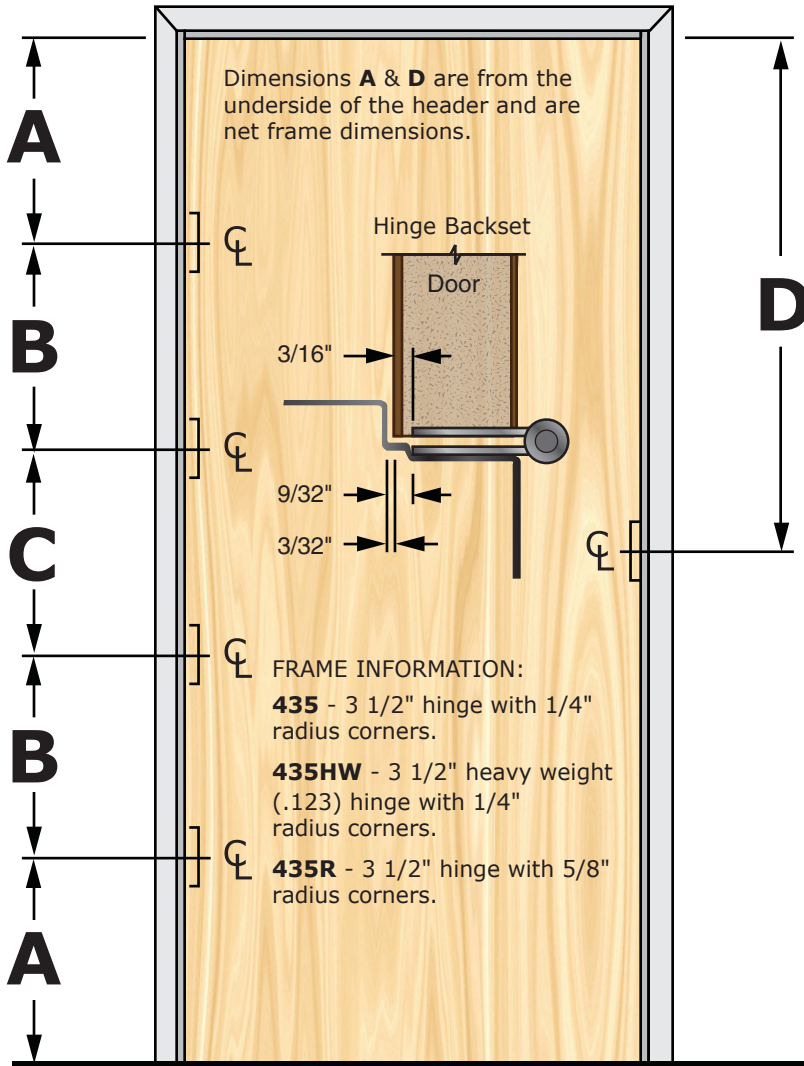


NET FRAME DIMENSIONS				
HEIGHT	A	B	C	D
6-0	10-3/32	17-1/4	17-1/2	32-3/32
6-8	10-3/32	20	20	40-3/32*
6-9	10-3/32	20-1/4	20-1/2	41-3/32
6-9	10-3/32	20-1/4	20-1/2	40-19/32*
6-10	10-3/32	20-1/2	21	42-3/32
7-0	10-3/32	21-1/4	21-1/2	44-3/32
7-0	10-3/32	21-1/4	21-1/2	42-3/32*
7-2	10-3/32	22	22	46-3/32
7-4	10-3/32	22-1/2	23	48-3/32
7-6	10-3/32	23-1/4	23-1/2	50-3/32
7-8	10-3/32	24	24	52-3/32
7-10	10-3/32	24-1/2	25	54-3/32
8-0	10-3/32	25-1/4	25-1/2	56-3/32
8-2	10-3/32	26	26	58-3/32
8-4	10-3/32	26-1/2	27	60-3/32
8-6	10-3/32	27-1/4	27-1/2	62-3/32
8-8	10-3/32	28	28	64-3/32
8-10	10-3/32	28-1/2	29	66-3/32
9-0	10-3/32	29-1/4	29-1/2	68-3/32
9-4	10-3/32	30-1/2	31	72-3/32
9-8	10-3/32	32	32	76-3/32
10-0	10-3/32	33-1/4	33-1/2	80-3/32

+ Frame Heights are 3/16" longer than callout door height unless ordered net. (3/32" top, 3/32" bottom for clearance).

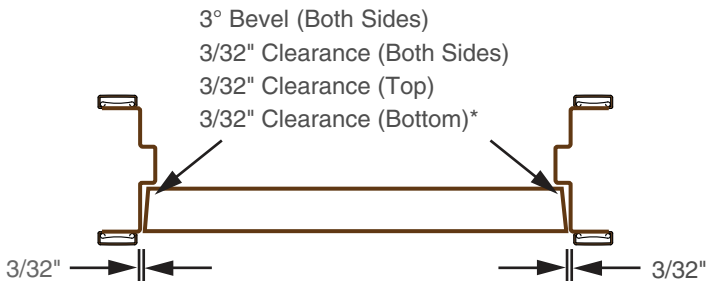

\*Additional clearance is required for Thresholds and various floor conditions.

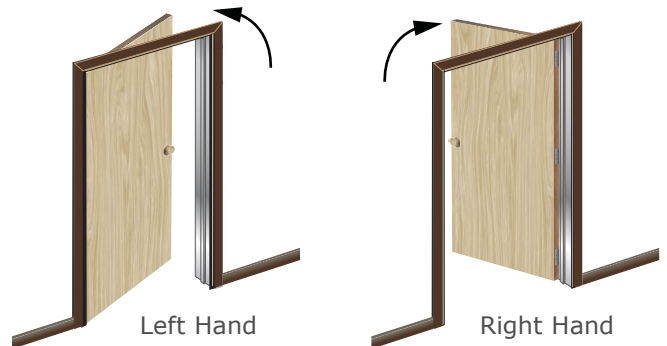

Handing Information: To establish handing always **Push** the door away from you.

\*Reversible - Frame can be used as Left or Right Hand, swing in or out

FOR SPECIFICATIONS NOT SHOWN, PLEASE CONSULT OFFICE.  
 PLEASE SPECIFY IF USING COMMERCIAL OR RESIDENTIAL WEIGHT HINGES.