



Frame Hinge and Strike Locations  
 1 3/4" with 2 Each 4" Hinges

NOTE: When using this chart for premachining door measurements, reduce the A & C dimensions 3/32" each for door clearance.

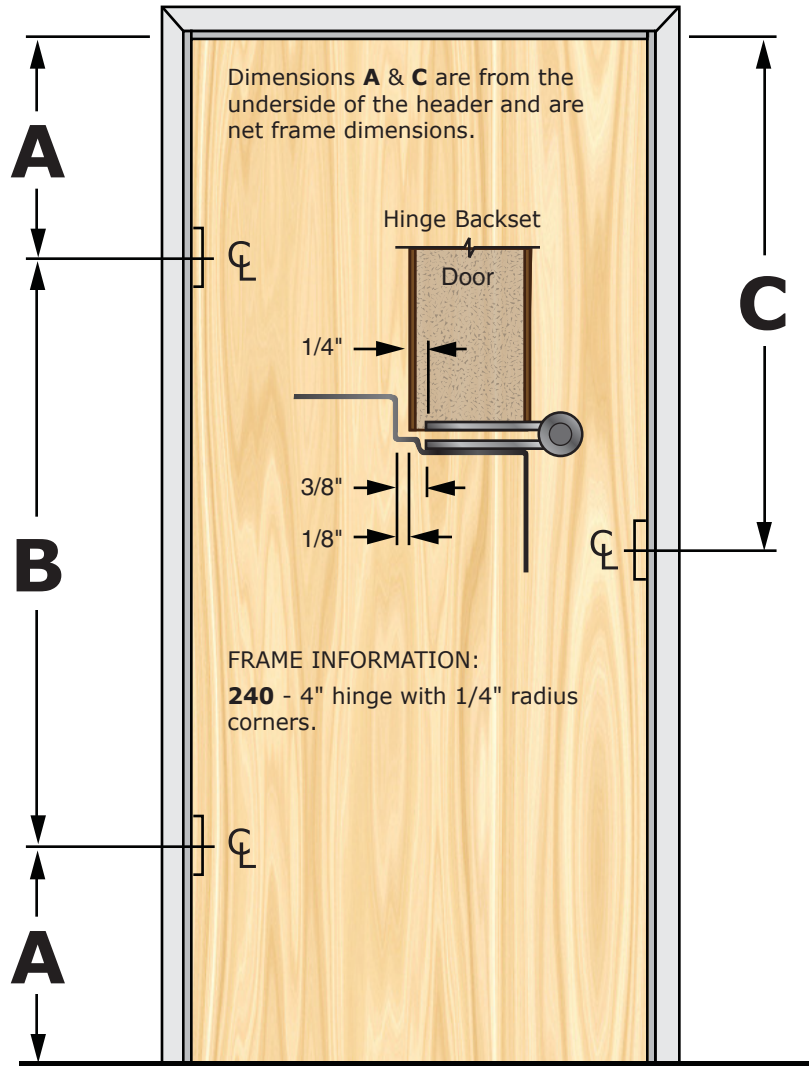


NET FRAME DIMENSIONS			
HEIGHT	A	B	C
3-0	10-11/32	15-1/2	18-3/32*
3-2	10-11/32	17-1/2	19-3/32*
3-6	10-11/32	21-1/2	21-3/32*
4-0	10-11/32	27-1/2	24-3/32*
4-2	10-11/32	29-1/2	25-3/32*
4-4	10-11/32	31-1/2	26-3/32*
4-6	10-11/32	33-1/2	27-3/32*
4-8	10-11/32	35-1/2	28-3/32*
4-10	10-11/32	37-1/2	29-3/32*
5-0	10-11/32	39-1/2	20-3/32
5-2	10-11/32	41-1/2	22-3/32
5-6	10-11/32	45-1/2	26-3/32
6-0	10-11/32	51-1/2	32-3/32
6-2	10-11/32	53-1/2	34-3/32
6-4	10-11/32	55-1/2	36-3/32
6-8	10-11/32	59-1/2	40-3/32*
6-9	10-11/32	60-1/2	41-3/32
6-9	10-11/32	60-1/2	40-19/32*
7-0	10-11/32	63-1/2	44-3/32
7-0	10-11/32	63-1/2	42-3/32*
7-2	10-11/32	65-1/2	46-3/32
7-4	10-11/32	67-1/2	48-3/32

+ Frame Heights are 3/16" longer than callout door height unless ordered net. (3/32" top, 3/32" bottom for clearance).

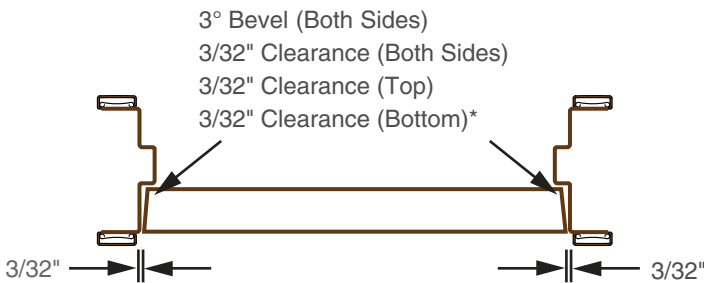

\*Additional clearance is required for Thresholds and various floor conditions.

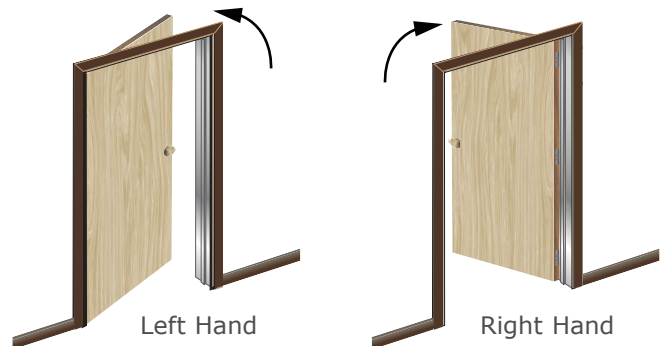

Handing Information: To establish handing always **Push** the door away from you.

\*Reversible - Frame can be used as Left or Right Hand, swing in or out

FOR SPECIFICATIONS NOT SHOWN, PLEASE CONSULT OFFICE.